




PHONE: (989) 435-7080


3195 LYLE ROAD • BEAVERTON, MI 48612  
www.howeracing.com

FAX: (888) 484-3946

### Brake Bias Adjuster Directional Guide

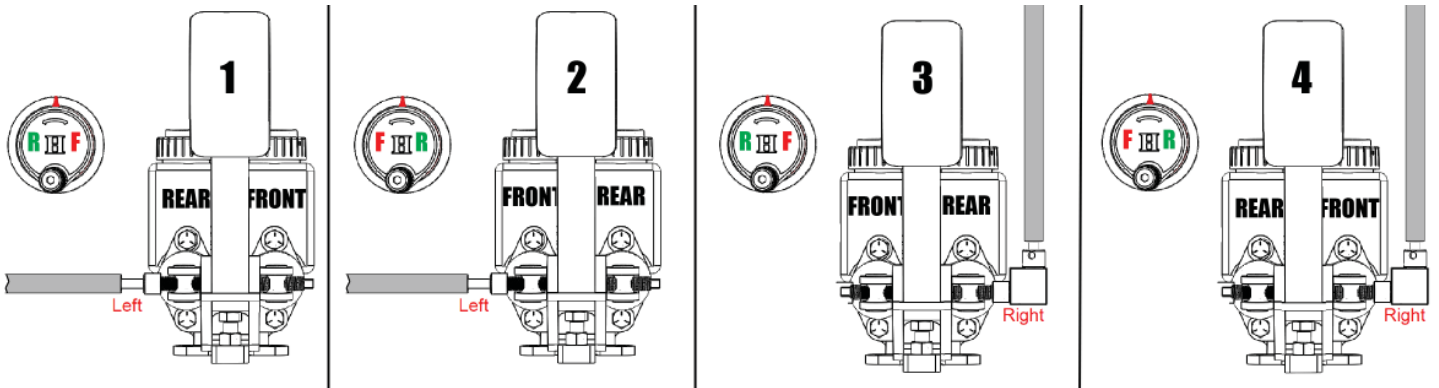

### Floated Bearing Pedal (Howe/Wilwood)

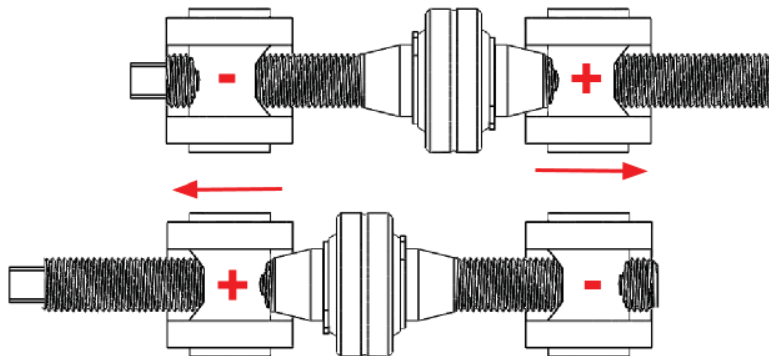

Floated and Fixed bearing balance bars adjust in opposite directions but the most pedal force will always go to the the master cylinder that is the closest to the bearing.



### Fixed Bearing Pedal (Pro Systems)

